PROGRAMMING

There are two 7 SEGMENT LED DISPLAYS used for programming. The first digit is used to indicate what function is being programmed. The second digit is used to indicate the value of that function. Of the 3 switches that relate to programming there is one slide switch and two push button switches. The slide switch is either in RUN or PROGRAM mode. During Program mode the function settings can be modified. During Run the function settings can be viewed but not modified.

As a safety feature THE DOOR WILL NOT OPEN WHEN THE SLIDE SWITCH IS SET TO PROGRAM.

The push button switches are labelled PASS and SET. Pressing the PASS button will select the next function. Pressing the SET button will change the present function value (when the slide switch is in program mode).





