
ENTRE/MATIC

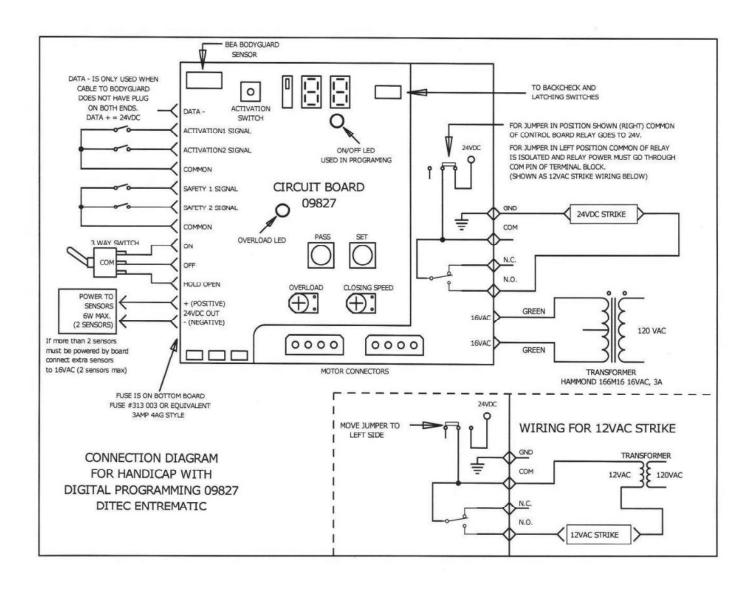

Note: A Switch or Jumper must be wired from the ON terminal to the OFF terminal for Programming to work. This is only needed if there is no switch on the board.

Page 28 of 34

Entrematic Canada Inc.
Toll Free: 1-877-348-6837
Email: info.ditec.ca@entrematic.com
Web: www.ditecentrematic.ca

Entrematic USA Inc.
Toll Free: 1-866-901-4284
Email: info.ditec.us@entrematic.com
Web: www.ditecentrematic.us

Ditec ENTRE/MATIC

Issued Date: 2014-12-17