


OUTSIDE LEVER HANDLE OR KNOB. INSERT MOUNTING POSTS THROUGH DOOR AND LOCK BODY ASSEMBLY THEN SECURE TO ADAPTER & PLATE ASSEMBLY USING (2) #8-32 SCREWS.

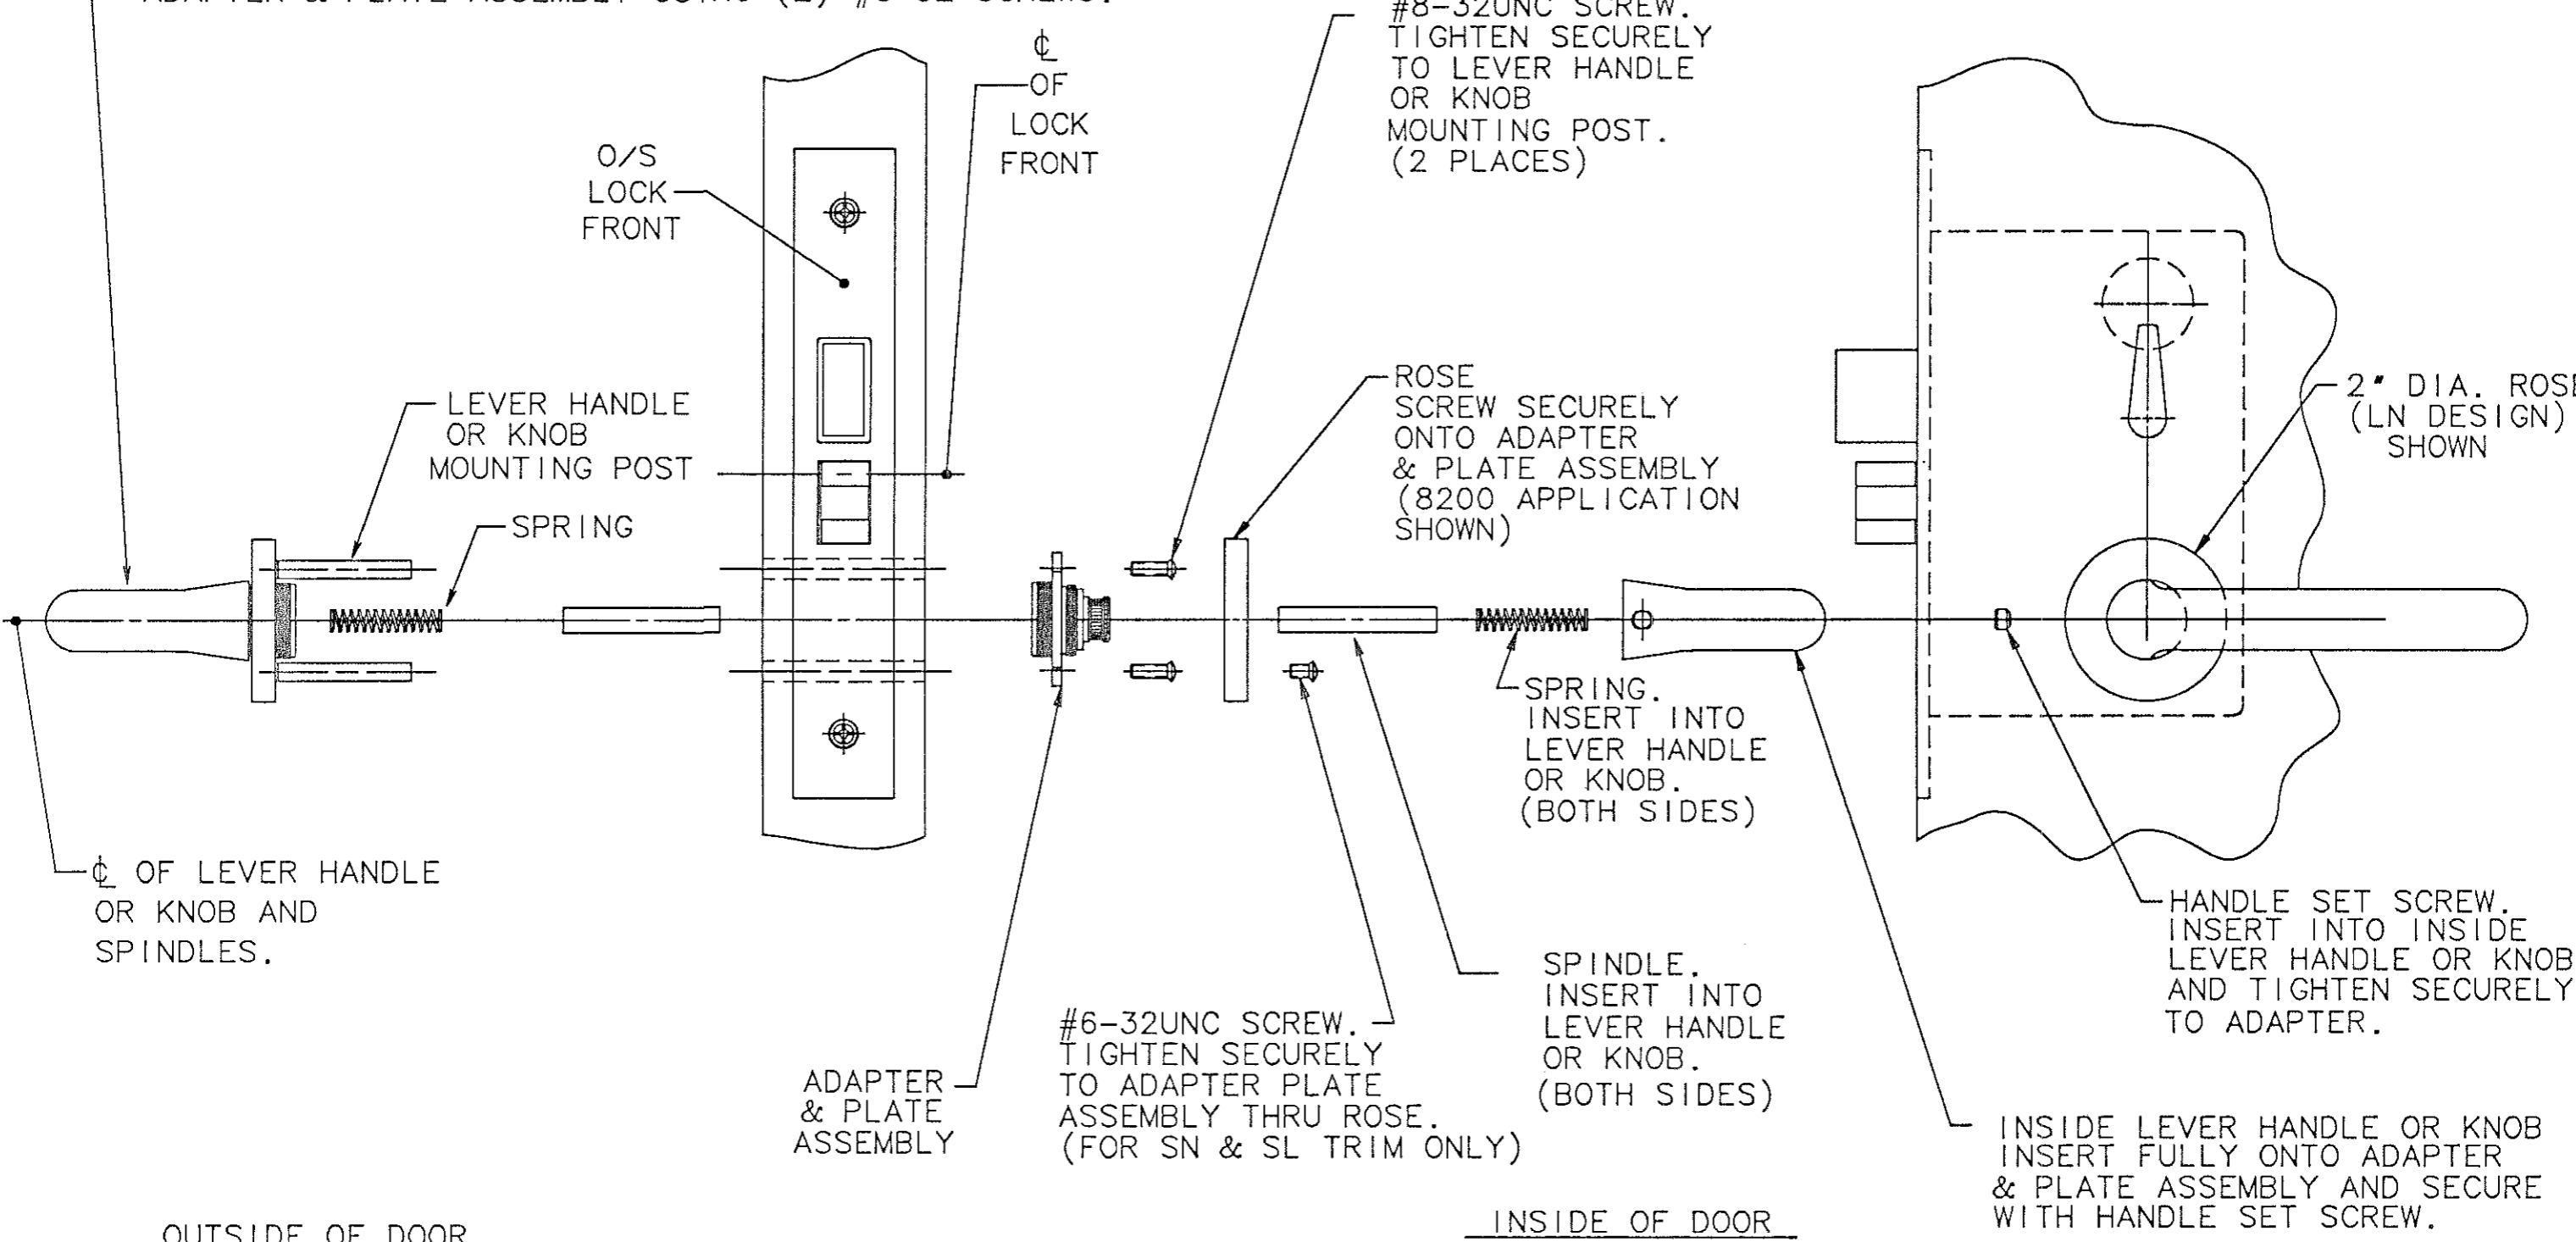

- ② FOR 9200, USED IN CONJUNCTION WITH TEMPLATE #4482 (LOCKBODY).
- ① FOR 7800/8200, USED IN CONJUNCTION WITH TEMPLATE #7057 (LOCKBODY).

SARGENT & COMPANY		NEW HAVEN, CONN. 06511	
TEMPLATE: 7800 & 8200 MORTISE LOCK		RELEASE DATE	
ROSE TRIM		07MAR02	
L, LN, E, O, SL, SN, CR AND TR DESIGNS		TEMPLET NO.	
		7058 D	